


Manual Open Die Head 1/2 - 1 1/2

290820	: 1/2-1 1/2	BSPT , 1 -1 1/4 BSW
295633	: 1/2-1 1/2	BSPT/NPT
295630	: 1/2-1 1/2	NPT
290823	: 16-42	PF/C
29082A	: M8-48	METRIC
29562U	: 5/16-1 1/2	UNC

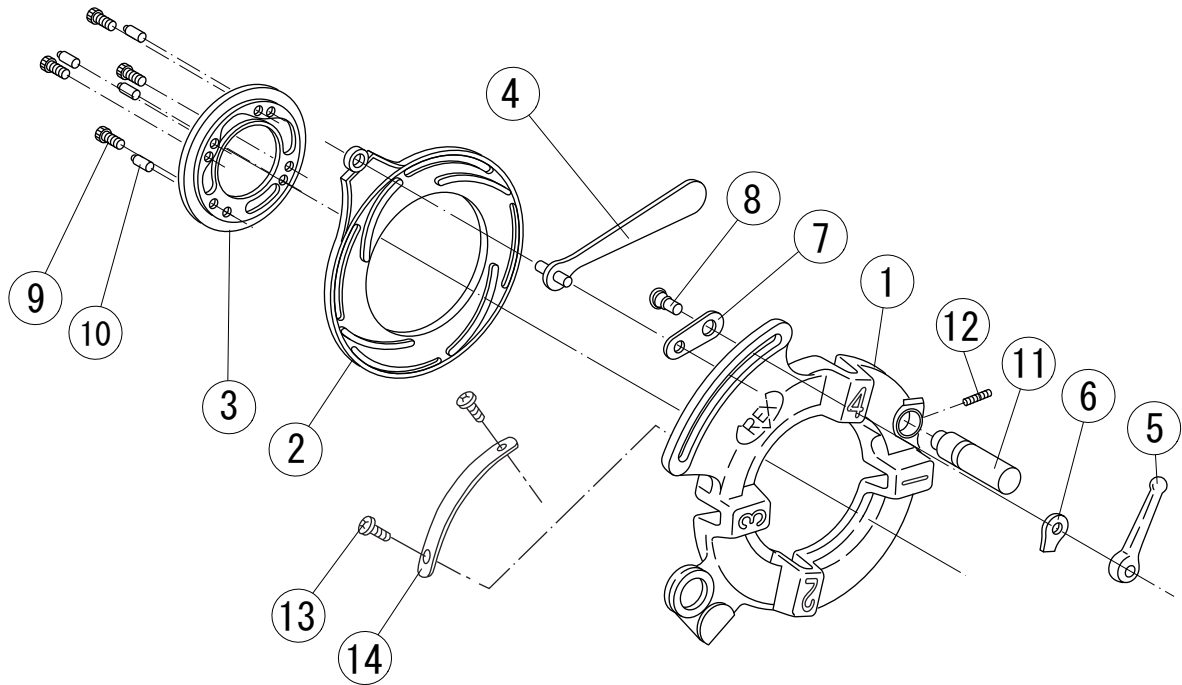

Line No.	Page No.	Exp. No.	Page Title	Part No.	Part Name	Spec.	Set	Remarks
1	1	1	Manual Open Die Head 40A	G801	UNIVERSAL DIE HEAD BODY	1/2-1.1/2"	1	
2	1	1	Manual Open Die Head 40A	G804	CAM PLATE		1	
3	1	1	Manual Open Die Head 40A	G805	UNIVERSAL RETAINING RING		1	
4	1	1	Manual Open Die Head 40A	2361	ECCENTRIC HANDLE		1	
5	1	1	Manual Open Die Head 40A	2377	LEVER NUT		1	
6	1	1	Manual Open Die Head 40A	2381	ECCENTRIC WASHER		1	
7	1	1	Manual Open Die Head 40A	2371	ECCENTRIC LINK		1	
8	1	1	Manual Open Die Head 40A	2386	ECCENTRIC SCREW		1	
9	1	1	Manual Open Die Head 40A	W062	SOCKET HEAD CAP SCREW	(M6x16)	4	
10	1	1	Manual Open Die Head 40A	G860	DIES NOTCH		4	
11	1	1	Manual Open Die Head 40A	7713	DIE HEAD POST		1	
12	1	1	Manual Open Die Head 40A	W661	HEX SOCKET HEAD SET SCREW	(M6x6)	1	
13	1	1	Manual Open Die Head 40A	W541	TRUSS SCREW	(M4x5)	2	
14	1	1	Manual Open Die Head 40A	L290	SIZE PLATE	BSPT/BSW1/4-1.1/2"	1	
14	1	1	Manual Open Die Head 40A	G891	SIZE PLATE	BSPT/NPT1/4-1.1/2"	1	
14	1	1	Manual Open Die Head 40A	9203	SIZE PLATE	NPT1/4-1.1/2"	1	
14	1	1	Manual Open Die Head 40A	G843	SIZE PLATE	PF/C 16-42	1	
14	1	1	Manual Open Die Head 40A	G842	SIZE PLATE	M8-48	1	
14	1	1	Manual Open Die Head 40A	G841	SIZE PLATE	UNC 5/16-1.1/2"	1	