## **RB TUBE CUTTER MODEL N28/N28S**

No.	Code no	PARTS NAME	Q' ty	REMARKS
1	RBV1	Body	1	
2	RBV2	Arm	1	
3	RBV3	Grip	1	
4		Carriage thread	1	
5-a	424231	Cutter wheel for copper pipe	1	Old no. RB09 / Assembled with No.10 bearing
5-b	424240	Cutter wheel for stainless steel pipe	1	Old no. RB10 / Assembled with No.10 bearing
5-c	424242	Cutter wheel for copper pipe	1	Old no. RB96 / Assembled with No.10 bearing
6	RBV8	Roller pin	2	
7	RBV9	Roller collar	4	
8	RBVA	Cutter wheel pin	1	
9	RBVB	Arm nut	1	
10	KM23	Bearing 695ZZ (5x13x4)	8	
11	KM35	Thrust Bearing (6x12x4.5)	1	
12	RBVE	Cross recessed pan head machine screw (M3×6)	1	
13	WY04	E ring (4)	1	
14		E ring (5)	1	
15	WG03	Spring washer (3)	1	